 


Mesquol

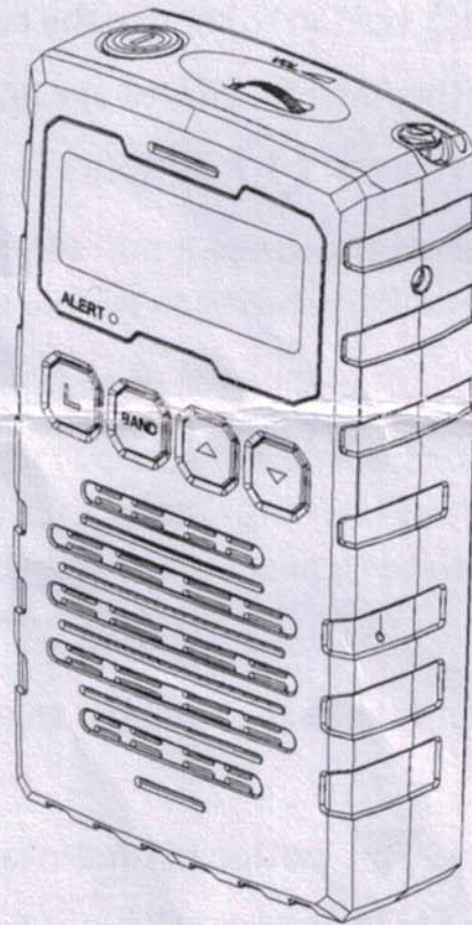 


CR1015

Emergency Alert Radio

with AM/FM/SW/NOAA weather

Chapter 1 LOCATION OF CONTROLS

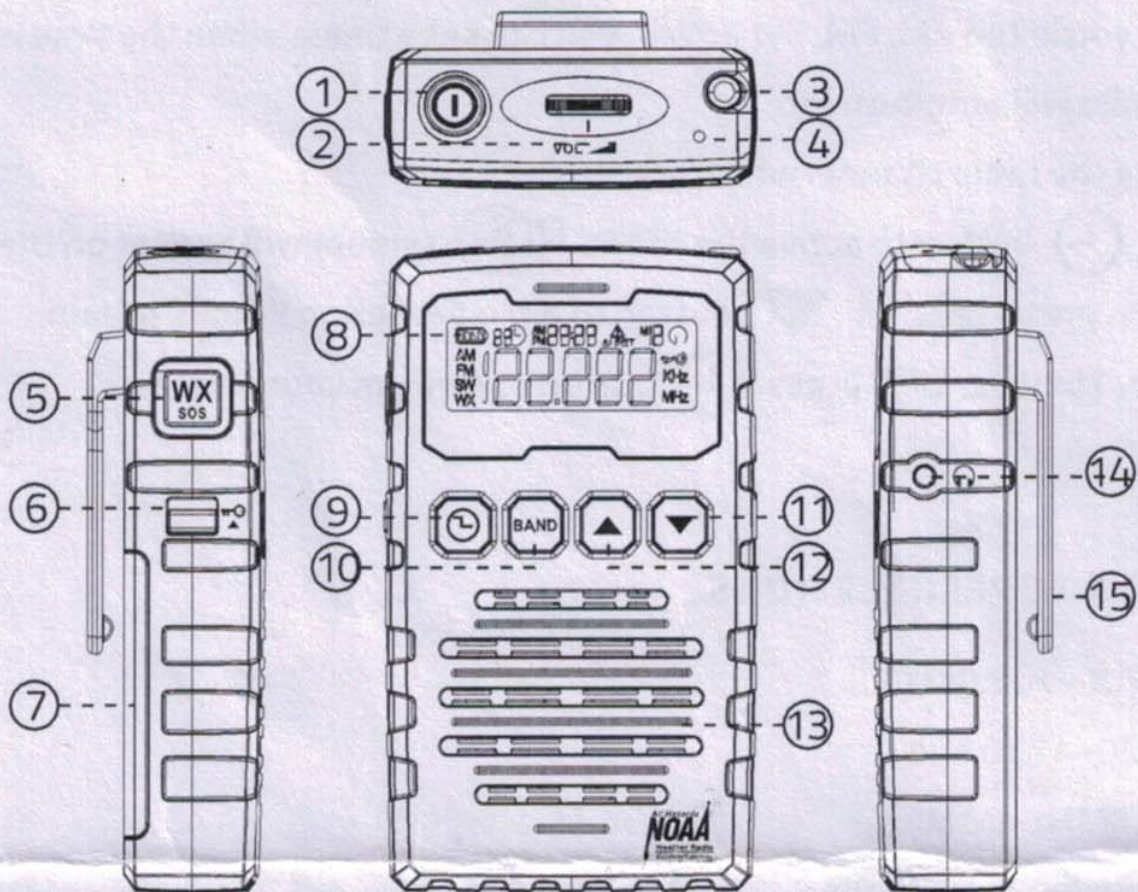

① Power Button

Press Power Button to turn on radio, press it again to turn off radio.

② Volume Control Knob


③ Telescopic Antenna

To receive clear signal, you may plug telescopic antenna.

④ Alert Flash Lamp

⑤ WX/SOS Button

⑥ Lock Switch

The lock switch prevents accidental changing of any of the radio settings. Slide the lock switch to the up 'locked' position, the  symbol will appear in the display. The power and all other buttons will be disabled.

⑦ Battery Compartment

⑧ LCD Display

- ⑨ Timer/Clock Set Button
- ⑩ Band Selection Button
- ⑪ Tune- Button
- ⑫ Tune+ Button
- ⑬ Speaker
- ⑭ Headphone Jack
- ⑮ Belt Clip

A removable belt clip is provided on the back of the unit.

Removal:

It can be removed by gently pushing on the center tab of the clip where indicated, and sliding the clip downward towards the bottom of the radio.

Replacement:

You can easily connect the belt clip by inserting the top of the clip into the designated receiver slots and gently pushing the clip in an upwards motion towards the top of the radio.




- ⑯ Band Indicator
- ⑰ Battery Life Indicator
- ⑱ Timer Indicator
- ⑲ Clock Indicator
- ⑳ Alert Indicator
- ㉑ Headphone Indicator
- ㉒ Lock Switch Activated
- ㉓ Frequency Indicator


Chapter 2 BATTERY INSTALLATION


1. Turn radio off.
2. Prepare replacement batteries to ensure a quick and easy change. Failure to change batteries within 1 minute will reset presets and clock settings.
3. The battery cover is located on the back of the unit. Apply a gentle downward pressure and slide the door to the right side of the unit.
4. Place 3 'AAA' batteries inside the unit oriented to the illustration located just below the battery compartment.

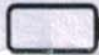


NOTE:




A flashing  symbol appearing on the LCD display indicates a weak battery and that replacement of batteries is required. And the Weather lert will be deactivated.


Chapter 3 SETTING THE CLOCK

Press  button to turn on radio, radio enter standby mode.

At the standby mode, press  button to enter clock setting.



Press  or  button to adjust hours, press  button to confirm.

Press  or  button to adjust minute, press  button to confirm.

Note: Only in standby mode, then you can set the clock. If the radio stay in FM, AM, SW or WB mode, you can press  button to enter standby mode.


Chapter 4 RADIO OPERATION

1. Turn on radio

Press  button to turn on radio, radio enter standby mode, press  button again to turn off radio.

2. Band

Repeatedly press **BAND** button to choose the band you want to listen to. You can choose from the AM/FM, Shortwave and Weather Band.

To exit Band function, just press  button.

Weather Band: Receives all 7 weather band from NOAA, the U.S. National Weather Service which broadcasts in all 50 states, Puerto Rico and the U.S. Virgin Islands.


162.400 / 162.425 / 162.450 / 162.475 / 162.50 / 162.525 / 162.55MHz

AM Band: Receives all local AM stations from 520KHz to 1710 KHz.



FM band: Receives all local FM stations from 87.50MHz – 108.0MHz.


SW Band: Receives all Shortwave bands from 2.3MHz- 23MHz


3. Volume Control

Rotate **VOL**  Volume knob to adjust the sound volume.

4. Manual Tuning Channel

Repeatedly press  or  button to tune into the desired channel.

Each press  button, FM frequency will tune up by 0.1.



Each press  button, FM frequency will tune down by 0.1.

5. Auto Scanning Radio Channel

Hold press  or  button for more than 2 seconds to start auto scanning.




Scanning will stop automatically once it receive an available channel.

8. Weather Band


Repeatedly press **BAND** button to select WB band, then Repeatedly press  or  button to choose one of the WB band which is for your local weather station.

9. Weather Alert Function

Manual Setting Mode



- (1) To enable the NOAA Weather Alert function, press  button.
- (2) When the function is enabled, the **WX** symbol on the LCD will flash.
- (3) When a weather alert is received, there will be an audible siren comes out, the flashlight, the  symbol and the backlight on the LCD will flash.
- (4) After a weather alert is received, press any button, the audible siren will be stop, the flashlight and the backlight will be turn off, the  symbol on the LCD will disappear. Radio will switch to the weather channel which send weather alert automatically.

Standby Mode

In standy mode, Radio also can receive weather alert, when it receive weather alert, the radio will turn on automatically, and then it will sound an audible siren, the flashlight, the  symbol and the backlight on the LCD will flash.

Chapter 5 SOS ALERT






In a emergency, you can turn on the flashing red SOS light and Alert sound.

1. Hold press  Button more than 3 seconds to turn on SOS alert.
2. Press  Button again, the SOS alert will be turned off.

Chapter 6 SETTING TIMER

When you listen AM, FM, SW or WB, you can set a timer, when the time is up, Radio will auto turn off.

Setting the radio channel which you desire.

Press  button to active the timer,  symbol will appear on the display, press  or  button to adjust duration 90min, 45min, 30min, 15min or OFF, press  button to confirm your selection.

Chapter 7 SPECIFICATIONS

FM: 87.5 ~ 108.0MHz

AM: 520~1710 Khz

SW: 2.3MHz- 23Mhz

 
WB: USA 1-7CH with Alert



Contact our experts

service@mesqool.com

[Http://www.mesqool.com](http://www.mesqool.com)



Made in PRC

Version 1.0